

Flat Band Assembly Instructions



To attach your flat bands to the slingshot you will need to use the two fixing strips provided. Some string is helpful to finish the last few steps.



Start by ensuring the correct orientation and wrapping the strip once around the fork.




Place the band on the correct side of the slingshot fork and wrap the strip around the band.




Tightly wrap the strip around the band several times to ensure a tight fit.



After several wraps, create a loop in the string and place the string across the band. Wrap tightly once more over the loop.

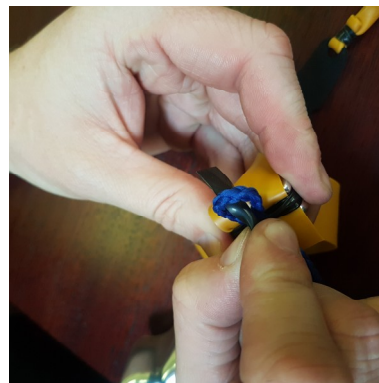

Feed the fixing strip through the loop as shown while keeping the tension in the fixing strip.

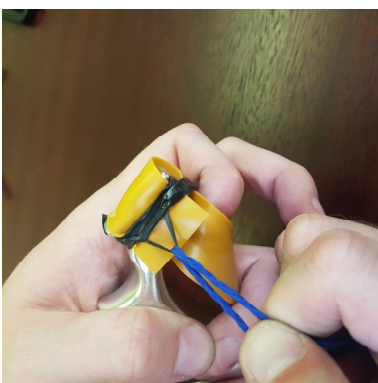

Pull the string from under the final wrap to secure the band to the fork. You can trim the remaining strip with scissors for a neater finish.



Repeat the process on the other fork. This wrap and tuck process can be used for TTF or OTT slingshots, just remember to check the orientation first before assembly.